


CLEANSSETTE Manual

Optical Connector Cleaner

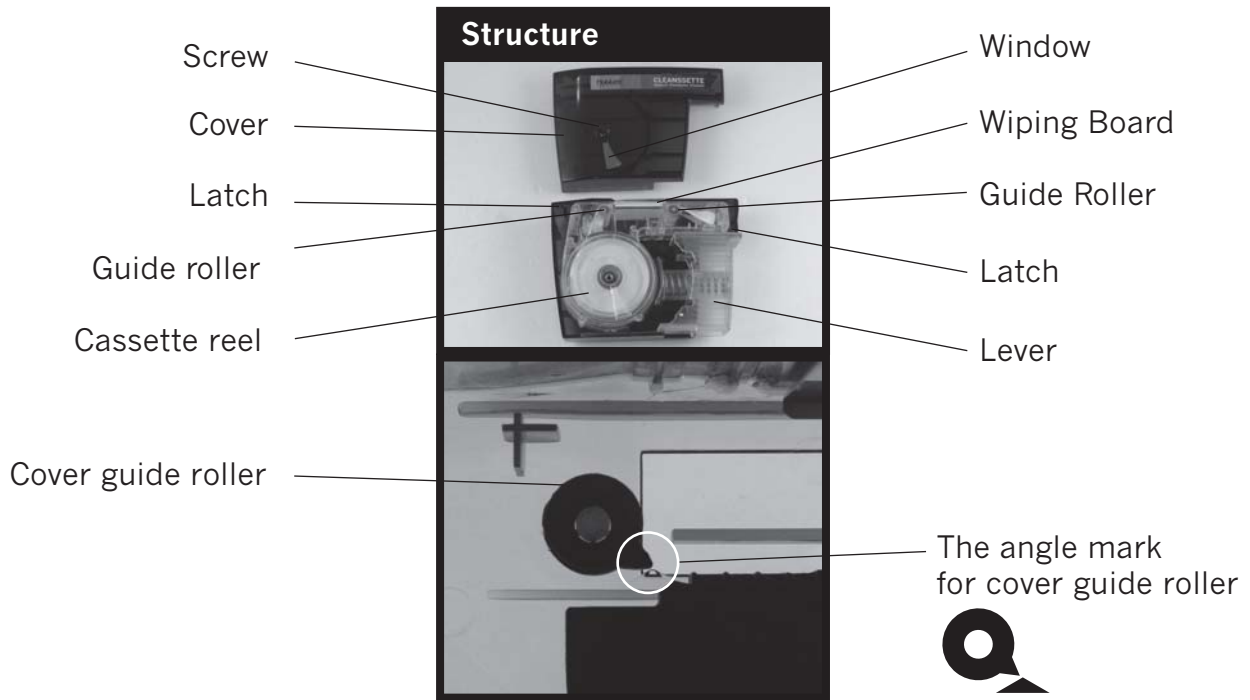

How to use



1. Open the shutter by gripping lever. New cleaning tape will appear.



2. Push and slide a ferrule end face while gripping the lever. While sliding the ferrule end face, please make sure the ferrule end face has completely touch the cleaning tape. After slide the ferrule end face in one slot, turn the ferrule end face 90 degree and slide the second slot.

3. Close the shutter by releasing the grip.




4. You may view the remaining reel from the window.

How to replace the Cassette Reel.



1. Turn the screw with a coin and open the cover.

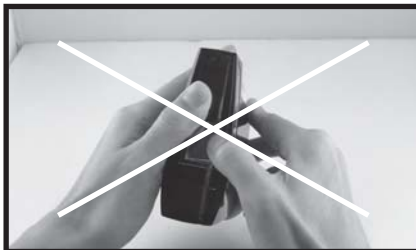

2. Never open cover from the top. It may cause damage to the cover.




3. Always open cover from the bottom. When open the cover, please use one hand to grip one of the covers and the other hand opens.



4. Pull out the finished cassette reel and replace with new one.



5. When putting the new cassette reel, make sure the cover guide roller is pointing to the top of angle mark and the metal cover is in the slot.

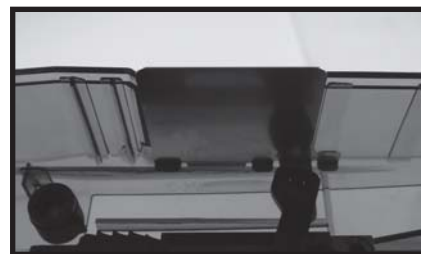

6. Close the cover and tighten the screw.

CAUTION!

When the lever becomes easy to depress, it indicates a new refill is needed. Repeated forceful depression of lever can cause damage to cleaner mechanism. Be Careful not to place this product at more than 60°C for long times and it may lose its functionality. Replace the new reel in the manual way. If you do not, a damage may result. CLEANSSETTE can not be warranted when improper replacement is installed.