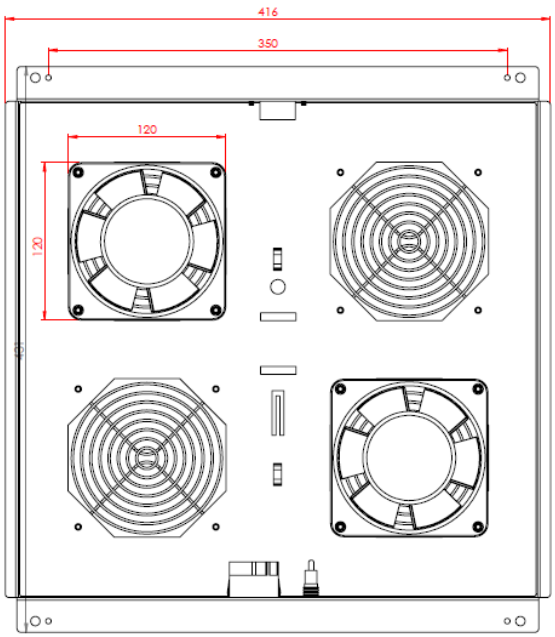
416
350
120
120

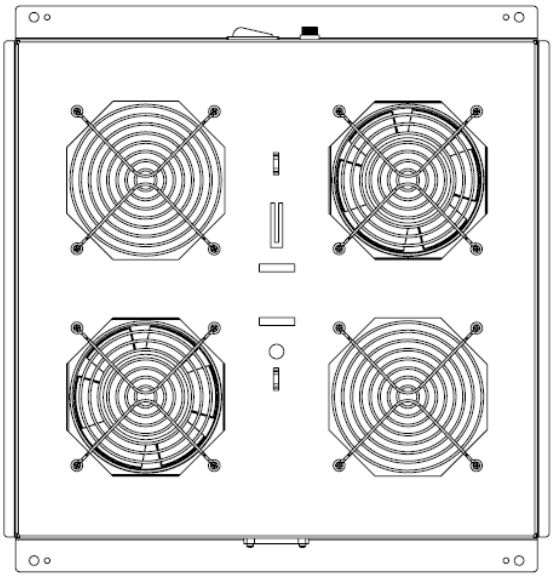

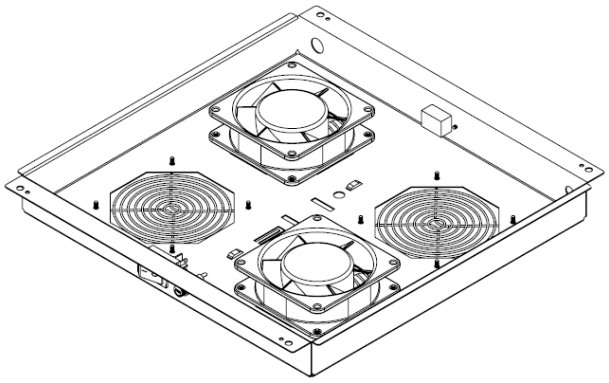

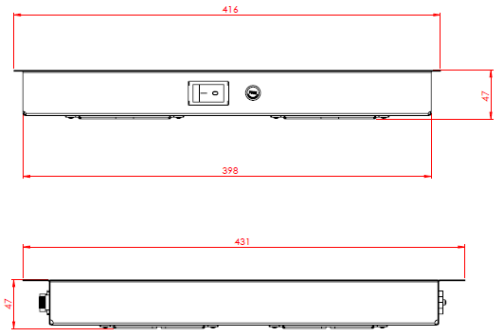
416
47
398

431
47

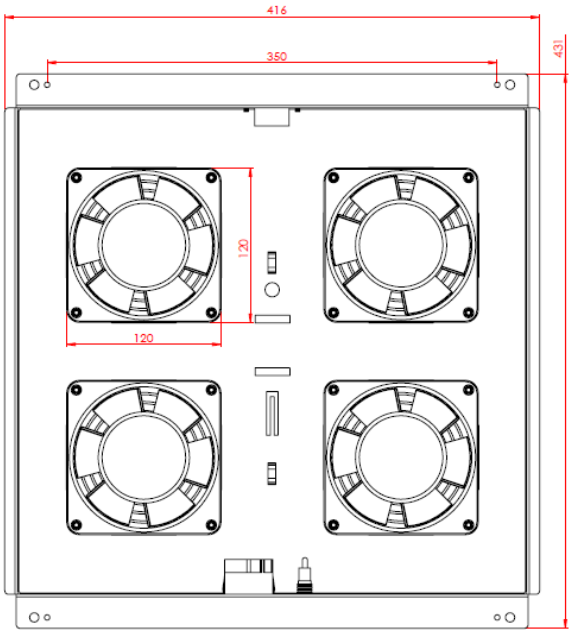
416
350
431
120
120

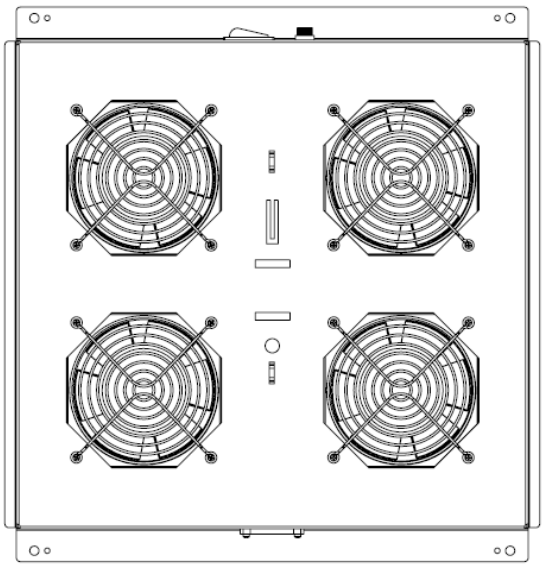

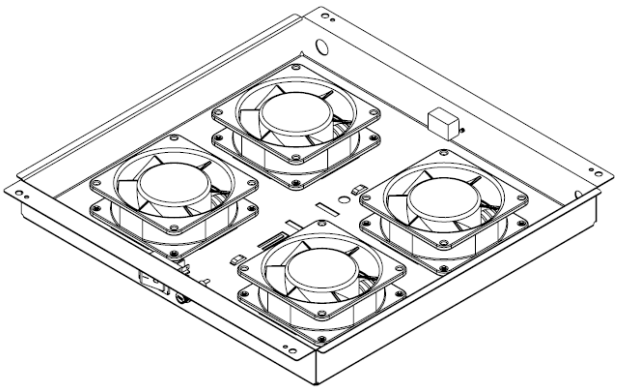

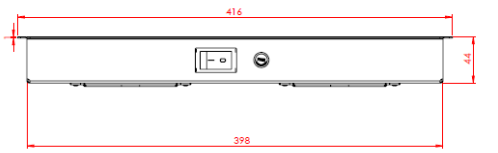
416
44
398


431
380
44

Mounting Instruction for Network Cabinets of the Unique Series

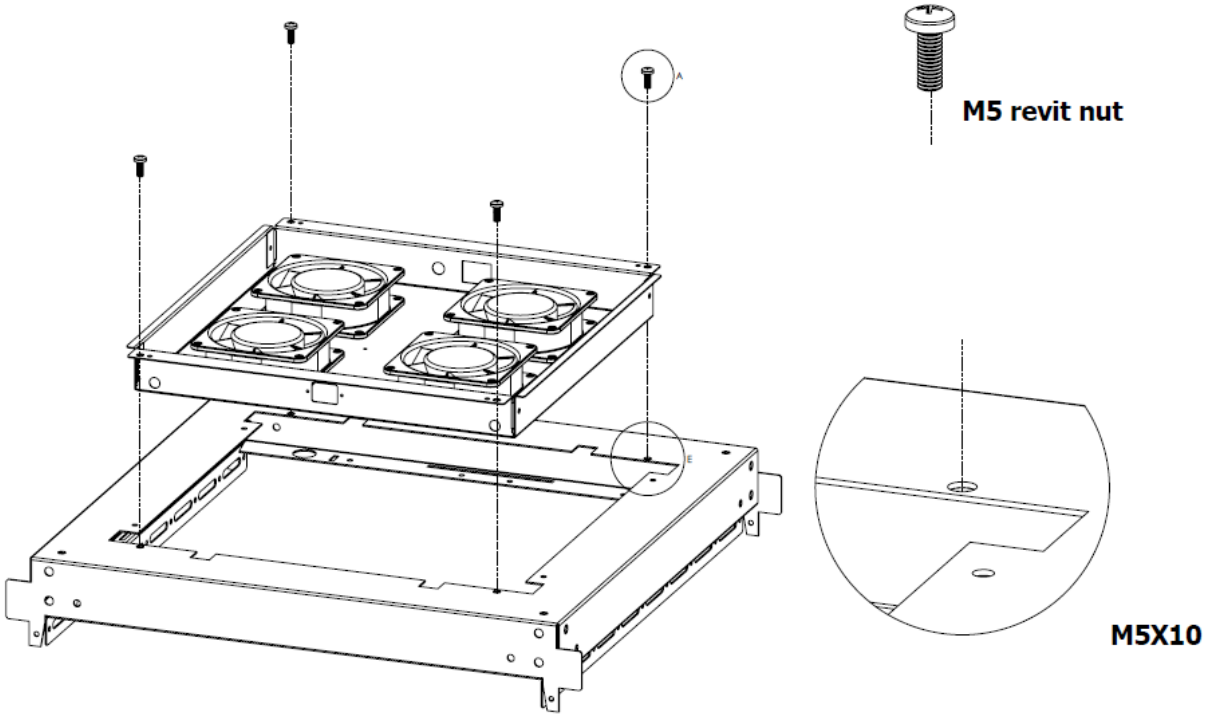
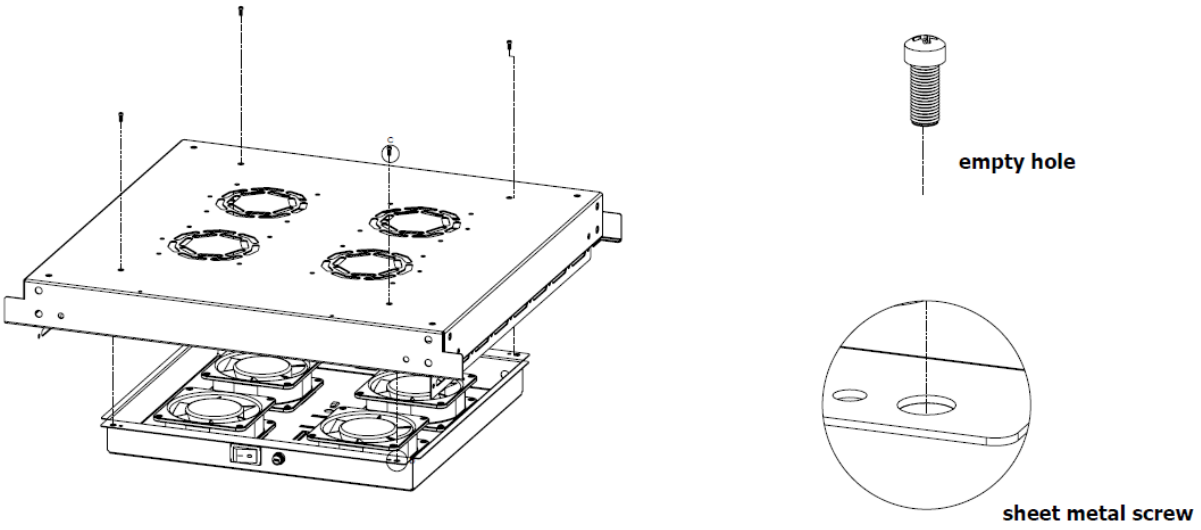
Mounting Instruction for Network- & Server Cabinets of the Dynamic Basic Series